


Sticker with prescribed tyre pressures

The sticker with the prescribed tyre pressure values is located in the centre body pillar on the driver's side.

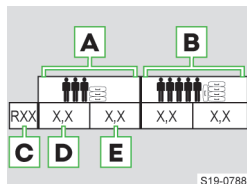

- A** Inflation pressure for half load
- B** Inflation pressure for a full load
- C** Tyre diameter in inches
This information only serves as information for the prescribed tyre pressure. This is not a listing of approved tyre sizes for your

vehicle. These are in the vehicle's technical documentation, as well as in the declaration of conformity (in the so-called COC document).


- D** Tyre pressure reading for the front axle tyres
- E** Tyre pressure reading for the rear axle tyres

Tyre pressure monitor

Functionality




The tyre pressure monitoring indicator indicates a change in tyre pressure.

Warning when pressure changes

 illuminates

- › Stop the vehicle.
- › Check the tyres and tyre pressures.

Show tyres with modified pressure

- › Select the menu item for displaying the tyre condition in menu  ›  › .

Function restriction


 
The system is unable to provide a warning in the event of a very rapid tyre pressure loss, e.g. sudden puncture.

The system function may be restricted in the following cases:

- ▶ Uneven loading of the wheels, e.g. with a trailer attached
- ▶ Sporty driving style
- ▶ Driving on dirt roads
- ▶ Snow chains fitted

Saving tyre pressure values

Saving tyre pressure values

- › Press the  button under the Infotainment.
- › In the displayed menu in Infotainment, tap the functional surface .
- › Then follow the instructions on the screen.

Save the tyre pressures in the following cases:

- ▶ Change of tyre pressure
- ▶ Change of one or more wheels
- ▶ Change of position of a wheel on the vehicle
- ▶ Always after covering a distance of 10,000 km or once a year


Troubleshooting

Tyre pressure display faulty



flashes for about 1 minute and stays on

- › Stop the car, turn the ignition off and on again.


If the symbol  flashes again after turning on ignition, there is a system fault.

- › Continue driving, exercising appropriate caution, and seek the help of a specialist garage.

Wheel bolt cover caps

Remove cover caps and install

Disconnecting

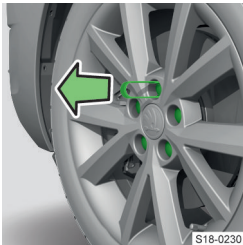

- › Push the pull-off clamp onto the cover cap up to the stop.
- › Remove the cover cap.

Installing

- › Push the cover cap onto the wheel bolt to the stop.

Full wheel frame

Removing and installing the trim

Applies to factory built or original accessory trims from ŠKODA.

Disconnecting

- › Hang the clamps for removing the wheel trims at the edge of one of the openings in the trim.
- › Push the wheel wrench through the clamp, support on the tyre and pull off the wheel trim.

Installing

- › Press the wheel trim onto the wheel rim at the designated valve opening.

When using an anti-theft wheel bolt, it must be located at the location indicated on the bezel.

- › Press the trim, starting at the valve, into the rim on both sides until it engages around the entire circumference.

ⓘ NOTICE

- ▶ Use hand pressure, do not hit the wheel cover.