

The interior lights in the rear can be switched on and off independently. The button is located on the headliner in the rear.

Turning reading lights on/off



Press the button.

Depending on the equipment, there are reading lights located at the front and in the rear beside the interior lights.

Ambient lighting

General

Depending on the equipment, the lighting for some of the interior lights can be adjusted.

Activating/deactivating ambient light

1. "MENU"
2. "Vehicle apps"
3. "Interior lighting"
4. If necessary, "Ambience"
5. "Ambient lighting"

Turning ambient lighting on/off

The ambient lighting is switched on when the vehicle is unlocked and switched off when the vehicle is locked.

If the ambient lighting was deactivated using iDrive, it is not switched on when the vehicle is unlocked.

Selecting the colour

1. "MENU"
2. "Vehicle apps"
3. "Interior lighting"
4. If necessary, "Ambience"
5. "Colour"
6. Select the desired setting.

Adjusting the brightness

1. "MENU"
2. "Vehicle apps"
3. "Interior lighting"
4. If necessary, "Ambience"
5. "Brightness"
6. Select the desired setting.

Dynamic light

Individual actions, for example incoming calls or open doors, are indicated by light effects.

1. "MENU"
2. "Vehicle apps"
3. "Interior lighting"
4. If necessary, "Ambience"
5. "Dynamic light"
6. Select the desired setting.

Reduced for journey at night

Some lights of the interior lighting are reduced when the vehicle is driven in the dark.

1. "MENU"
2. "Vehicle apps"
3. "Interior lighting"
4. If necessary, "Ambience"
5. "Reduced for night driving"