


- If the target battery charge level is lower than the high voltage battery charge level, the battery will not be charged.

winter time when the high voltage battery temperature is low.

## Charging current

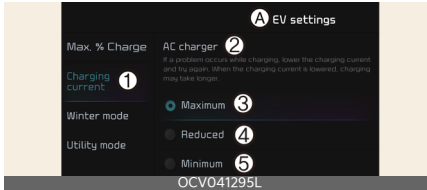

### A: EV Settings

#### 1 Charging current

#### 2 AC Charger


#### 3 Maximum

#### 4 Reduced

#### 5 Minimum

- You can adjust the charging current for an AC charger. Select an appropriate charging current.
- If the charging process does not start or abruptly stops in the middle, reselect another proper current and re-try charging the vehicle.
- Charging time varies depending on which charging current is selected.

## Winter mode

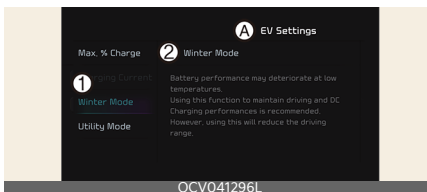

### A: EV Settings

#### 1 Winter mode

#### 2 Winter mode

You can select or deselect **Winter mode**.

The Winter mode is efficient during the