

## Driver's Key

### Using the driver's key

#### **i** Information

- Only use the driver's key when the vehicle is in your sight.

The Porsche Crest on the driver's key lights up when the driver's key is actuated. The crest on the driver's key may light up while driving even without actuating it.

Data of relevance for servicing and maintenance is stored on the driver's key while driving. The Porsche Crest on the driver's key may therefore light up without being actuated. For more information on storing and reading out the data on the driver's key:

- Contact your Porsche partner.

The remote control may not work for the following reasons:

- Radio waves can cause transmission interference (also radio contact between the driver's key and vehicle, such as in vehicles with Comfort Access).
- The remote control is malfunctioning due to a fault.
- The battery in the driver's key is flat.
- Ensure that you do not store the driver's key together with electronic devices that are switched on (e.g. mobile phone, notebook, charging cable). Store the driver's key somewhere else if necessary.



Fig. 76: Driver's key

- A** Unlocking the vehicle
- B** Lock the vehicle
- C** Unlocking the bonnet and vehicle
- D** Opening the tailgate and unlocking the vehicle

There is an emergency key integrated in every driver's key. The driver's keys can be used to operate all of the vehicle locks.

- Take care of your driver's keys: Do not part with them except under exceptional circumstances.
- Do not leave the driver's key in the vehicle.

### Using the emergency key

#### Removing emergency key



Fig. 77: Removing emergency key

- Push the emergency key out of the driver's key upwards.

#### Insert the emergency key

- Insert the emergency key into the driver's key until latched.

## Replacing battery in driver's key

### ⚠ WARNING

Internal chemical burns or death from swallowing the lithium button cell

The driver's key contains a lithium button cell (battery).

Swallowing the battery can lead to internal chemical burns within two hours and thus to death.

- ▶ Keep children away from removed or new batteries.
- ▶ Keep the driver's key away from children. Children may open the driver's key and remove the battery.
- ▶ If the battery has been swallowed or inserted into a bodily orifice, seek medical attention immediately.

### **i** Information

- ▶ Observe the disposal instructions for batteries.

When the battery in the driver's key needs to be replaced, a message appears on the instrument cluster. The Porsche crest on the driver's key no longer lights up when the driver's key is used.

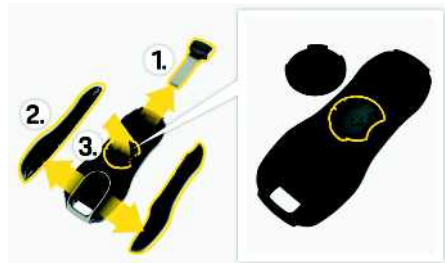


Fig. 78: Changing battery

### Change the battery (CR 2032, 3 V)

1. Remove the emergency key.
2. Unclip the two-part driver's key housing to the right and left.
3. Turn the battery cover anti-clockwise to open it, and remove it.
4. Replace the battery (check the polarity).
5. Replace the battery cover and turn it clockwise to close it.  
Ensure that the emergency key can be pushed in.
6. Press the driver's key housing up from below and clip it in place.
7. Insert the emergency key.

## Starting the vehicle with discharged driver's key battery or radio interference.

Malfunctions of wireless communication between the vehicle and the driver's key, or a discharged driver's key battery can disable detection of the driver's key.

To switch on the vehicle in this case, proceed as follows:

1. Place the driver's key in the rear cupholder in the centre console. Hold the driver's key in the 12 o'clock position against the wall of the cupholder.
2. Press the power button and turn on the vehicle.

## Ordering and storing replacement keys

Driver's keys can only be ordered from a Porsche partner. This can take a long time.

- ▶ Always have a replacement key available.
- ▶ Keep the replacement key in a safe place, but under no circumstances in or on the vehicle.

To register new driver's keys for the vehicle:

- ▶ Visit a qualified specialist workshop. Porsche recommends a Porsche partner as they have trained workshop personnel and the necessary parts and tools.
- ▶ Register all driver's keys belonging to the vehicle again.

### **i** Information

A total of eight driver's keys can be taught.

### **i** Information

- ▶ If a driver's key is lost or stolen, have a Porsche partner disable this driver's key in the vehicle and change the mechanical locks if necessary.
- ▶ You should notify your insurance company of the loss or theft of driver's keys or of the production of additional or replacement keys.